

Quick Start

MAX SINGLE TANK FOGGER INSTRUCTIONS



SOLUTION TANK

POWER SWITCH

ADJUSTABLE FOG VALVE

NOTE: Valve assembly features a chemical resistant VITON SEAL

Fill Tank

1. Remove cap and fill **TANK** with desired solution. Tank holds 1.5 gallons solution.
2. Replace cap securely.

Turn on Power

3. Plug the fogger into a grounded AC socket and turn it on using the **POWER SWITCH**, adjust the fog with the adjustable fog valve.

Miscellaneous

4. No fog will be dispensed until the valve is turned **COUNTERCLOCKWISE**.
5. The valve shuts off when the valve is turned **CLOCKWISE**.

For detailed instructions, please refer to the User Manual on reverse page.

PRECAUTIONS

TURN ADJUSTABLE FOG VALVE TO OFF BEFORE TURNING OFF FOGGER POWER

DO NOT LAY NOZZLE ON THE FLOOR, EVEN WITH THE ADJUSTABLE FOG VALVE AND FOGGER MOTOR TURNED OFF.



A Division of D.P.L. Enterprises, Inc.
3868 Post Road, Las Vegas, NV 89120
www.Air-Care.com 800-322-9919

P/N MM0208 Rev 5/14/2020

Safety

- The Air-Care Max Fogger can retain pressure in the tank after it has been turned off. If Adjustable Fog Valve is **NOT TUNRED TO OFF**, liquid can be discharged from the nozzle. Loosen cap and retighten it to relieve the tank pressure. Turn Adjustable Fog Valve to **OFF**.
- If the head of the fogger is stored below the level of the liquid in the tank **AND** the Adjustable Fog Valve is not fully off, liquid can be siphoned out of the nozzle.
- Always unplug the power cord before adding or removing solution or water from the tank.

Maintenance

The Air-Care MAX fogger requires a minimum amount of maintenance. After each use you should clean the motor air intake filter on the bottom as it becomes dirty, and rinsing out the tank, hose and nozzle at the end of each work day with clean water and letting the water wash out residual solution from the hose and nozzle.



Operating Instructions

- Plug the fogger into a grounded AC socket.
- The Adjustable Fog Valve will regulate the droplet size and flow. Move the Adjustable Fog Valve to the position that provides the smallest volume of fog needed for the job.
- As the Adjustable Fog Valve is slowly opened, a fine fog will be generated, and the volume and droplet size will increase as the valve is opened farther.
- When the fogger is not being used for an extended period of time, always shutoff the valve **FULLY** then Turn off the motor. Open the tank cap slightly and relieve the pressure to avoid leakage of liquid out of the nozzle, then tighten it again.

Troubleshooting

Q: Motor does not run.

A: Verify the power cord has the ground pin intact and is plugged into a grounded outlet with power

Q: Fogger is running but appears to be clogged.

A: Verify that the washable bottom air filter is clean.

Q: Fogger is running but no liquid is dispensing from the tank.

A: Verify there is a minimum of one quart of liquid in the tank.

For any other issue please contact
Air-Care Tech Support at

800-322-9919